


SERVICE INSTRUCTIONS

www.keatingofchicago.com

KEATING
OF CHICAGO, INC. ®

1-800-KEATING

REPLACING MICRO-LEVERS

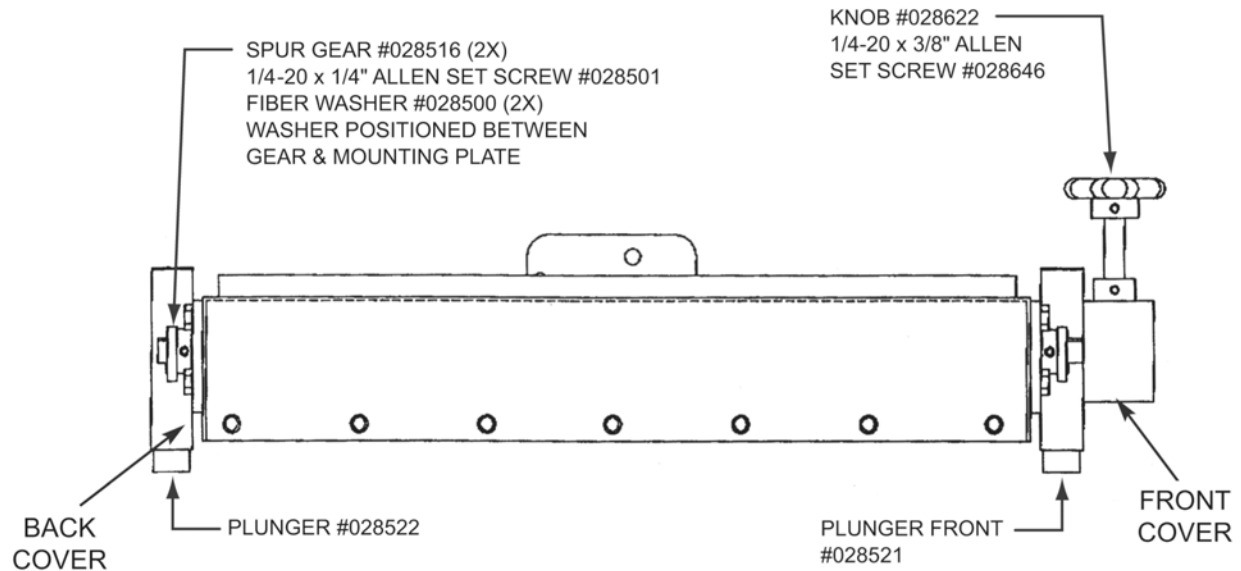

1. Unplug Top-Side Cooker.
2. Remove cover from front gear housing.
3. Remove cover from rear gear housing.
4. Turn adjusting knob clockwise until the Micro-Lever is completely down.
5. Insert rear Micro-Lever into rear housing with the thread side and align with the worm gear.
6. Turn adjusting knob to rake both the front and rear Micro-Levers.
7. Insert 10-32x1/2" screw in front gear to prevent the Micro-Lever from falling out.
8. Replace front and rear covers.
9. Plug in Top-Side Cooker.