

SERVICE INSTRUCTIONS


www.keatingofchicago.com

KEATING
OF CHICAGO, INC. ®

1-800-KEATING

TROUBLESHOOTING GAS VALVE

Part # 021675 (natural)

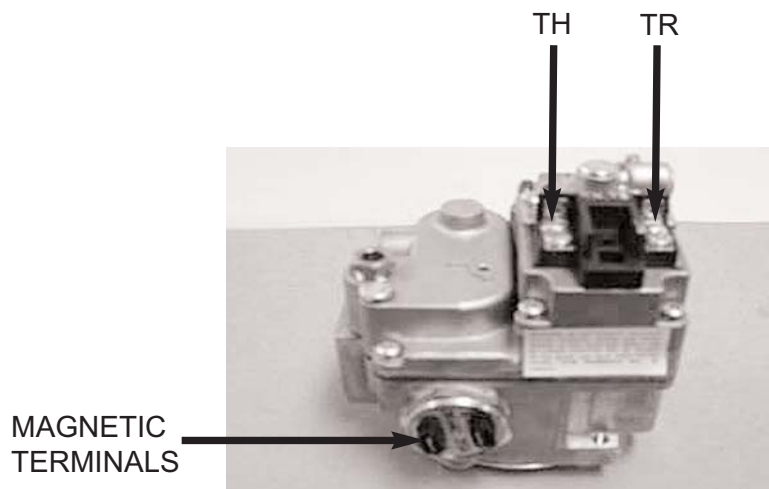

GAS CONTROL VALVE

To check Resistance of the gas valve, disconnect the wires going to the valve.

1. Resistance between the TH & TR terminals must be $72 \Omega \pm 4 \Omega$
2. Resistance between Magnetic Terminals must be more than 1 million Ω

If resistance is outside of specifications listed, the gas valve must be replaced.